

SHOREMAX® FLEXIBLE TRANSITION MAT

INSTALLATION GUIDE





Introduction to the ShoreMax® Transition Mat

The North American Green® RevetMax™ System ShoreMax® Transition Mat is designed for protection of high scour and high velocity applications. The flexible transition mat can be used in varying applications and can replace hard-armor designs with “green” vegetated designs.

To create the maximum vegetated design, we suggest combining two high-performance North American Green Erosion Control Products (ECPs), the ShoreMax Mat and a VMax® Turf Reinforcement Mat (TRM). North American Green offers many different VMax TRMs that can be used with the ShoreMax Mat. The VMax TRM’s special structural design anchors and reinforces the roots and stems of vegetation for long-term stability, and helps create a shear plane that deflects the flowing water away from the soil surface. The ShoreMax Mat provides mechanical protection and ballasting to the protected area and increases the immediate permissible shear stress capabilities of the system.

Once installed, the ShoreMax Mat offers protection comparable to hard-armor products such as rock riprap and articulated concrete blocks in turbulent flow and wave attack applications. ShoreMax Mat can take your high flow projects to the maximum in green vegetated design with unvegetated shear performance up to 8.6 lbs/ft²

FEATURES OF SHOREMAX TRANSITION MAT

ShoreMax Mat is the first flexible soft revetment scour protection system that easily installs over difficult soil topography, and does not require heavy equipment or expensive earth anchors to install. It’s also non-buoyant, so it won’t float or uplift in submerged and heavy flow conditions. ShoreMax Mat is designed with “spikes” that bite into the underlying mat, which prevents horizontal shifting of the mat.

KEY APPLICATIONS

ShoreMax Transition Mat is designed for immediate to permanent protection for high scour applications such as head-to-tail protection of drainage channels, culvert and pipe outfalls, and steep chute and slope drains like those associated with parking lots, roadways, mines and landfills. The flexible transition mat can be used to create soft revetment systems. ShoreMax Mat can be utilized for shorelines, streambanks, and spillway applications where wave attack can reach the super critical stage.

SHOREMAX TRANSITION MAT DESIGN CRITERIA						
TRM Underlayment Type and Phase		Maximum Permissible Shear Stress	Maximum Flow Velocity	Maximum Wave Attack Applications		
SC250	Unvegetated	7.5 lb/ft ²	18 ft/s	6 in. wave height, ≤4:1 slope	12 in. wave height, ≤5:1 slope	N/A
	Vegetated	10 lb/ft ²	18 ft/s			
C350	Unvegetated	8.0 lb/ft ²	19 ft/s	6 in. wave height, ≤3:1 slope	12 in. wave height, ≤4:1 slope	N/A
	Vegetated	12 lb/ft ²	20 ft/s			
P550	Unvegetated	8.5 lb/ft ²	19.5 ft/s	6 in. wave height, ≤2:1 slope	12 in. wave height, ≤3:1 slope	18 in. wave height, ≤5:1 slope
	Vegetated	14 lb/ft ²	25 ft/s			

The ShoreMax Transition Mat has been evaluated for its performance in conjunction with a VMax TRM in both channel and wave attack applications, resulting in these guidelines.

MAXIMUM DESIGN CONDITIONS			Anchor Pattern
Shear Stress	Velocity	Wave Height	
≤6 lb/ft ²	≤14 ft/s	6 in.	F
>6-8 lb/ft ²	>14-18 ft/s	12 in.	G
>8 lb/ft ²	>18 ft/s	18 in.	H

TABLE 1: Minimum anchor pattern

MINIMUM ANCHOR TYPE BASED ON SOIL TYPE	
Soil Type	Anchor Type
Clay - Clay Loam	10 in. Wire Staple or 12 in. ShoreMax Stake
Silt Loam - Loam	10 in. Wire Staple or 12 in. ShoreMax Stake
Sandy Loam	12 in. Wire Staple or 12 in. ShoreMax Stake
Sand/Muck ≤6 in.	12 in. Rebar Staple
Sand/Muck 6-12 in.	18 in. Rebar Staple
Sand/Muck 12-18 in.	Earth Anchor 400 + 12 in. Rebar Staple
Sand/Muck >18 in.	Earth Anchor 680 + 18 in. Rebar Staple

TABLE 2: Minimum anchor type

Anchoring and Guidelines

Installation of the ShoreMax Mat can be done simply and without the need for expensive equipment. The ShoreMax Mat and TRM underlayment are simply installed over a prepared seeded soil and fastened into place with anchors. Special percussion earth anchors are typically not required.

The ShoreMax Mat's flexibility allows it to be easily installed using a variety of fasteners such as the ShoreMax Stake, wire staples, rebar staples and percussion earth anchors. Because it easily self-conforms to the underlying terrain, fasteners are not required to force conformance with the underlayment material - they only serve to hold the panels in place. The type and size of fastener used is simply dependent upon the underlying soil and degree of compaction.

Anchoring patterns for the ShoreMax Mat vary depending on the project applications with increased anchoring patterns required for higher flow or scour applications. Please refer to the tables and figures on this page to determine the appropriate anchor type and anchor pattern. For site-specific recommendations use the Erosion Control Materials Design Software® (ECMDS) for help in selecting a ShoreMax Mat and fastening details. Visit www.ECMDS.com for more information.

ANCHORING GUIDE

1. When installing the ShoreMax Mat, the anchor pattern (Figures 1 or 2) should be selected based on the expected maximum design conditions (shear stress, velocity or wave impact) (Table 1).
2. Anchor type selection should be based on the soil type and pull-out strength required (Table 2). In soft, highly erodible soils percussion earth anchors may be necessary. Earth anchors can be installed in conjunction with staples (Figure 2).
3. When using percussion earth anchors, position anchors in each corner and the center of the panel. Place staples in the appropriate pattern through remainder of mat. Staples can be shared between two adjacent panels.

***NOTE:** Number of staples used per panel can be reduced by 30-40 percent when sharing staples between panels.

☐ - Staple/Stake ⊕ - Percussion Earth Anchor

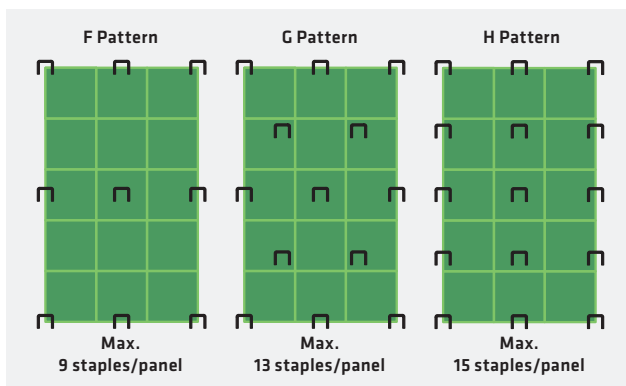


FIGURE 1: Anchor Patterns for use with staples/stakes

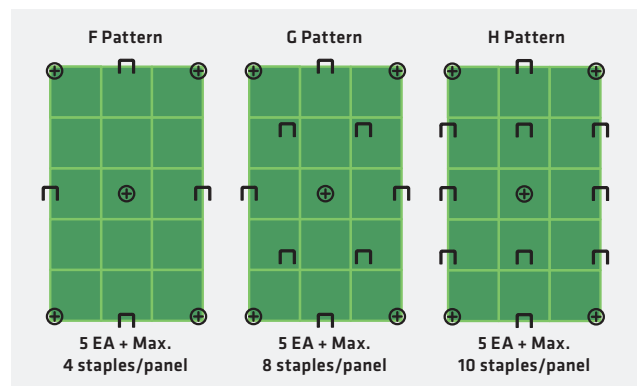


FIGURE 2: Anchor Patterns for use with a combination of earth anchors and staples

Channel Design Guideline

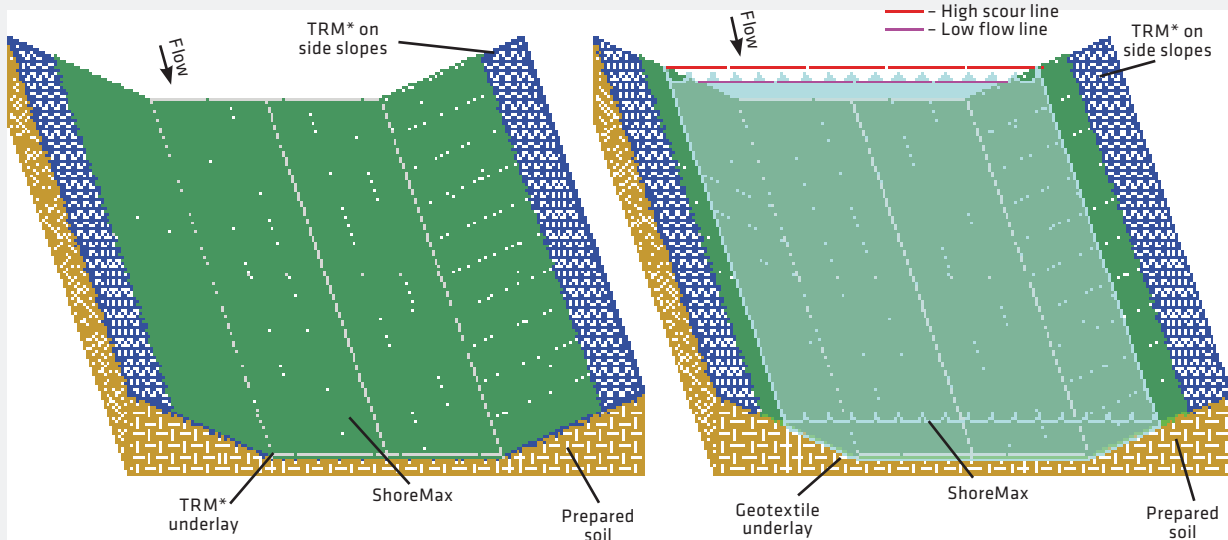


FIGURE 3: Steep channel

FIGURE 4: Continuous flow channel

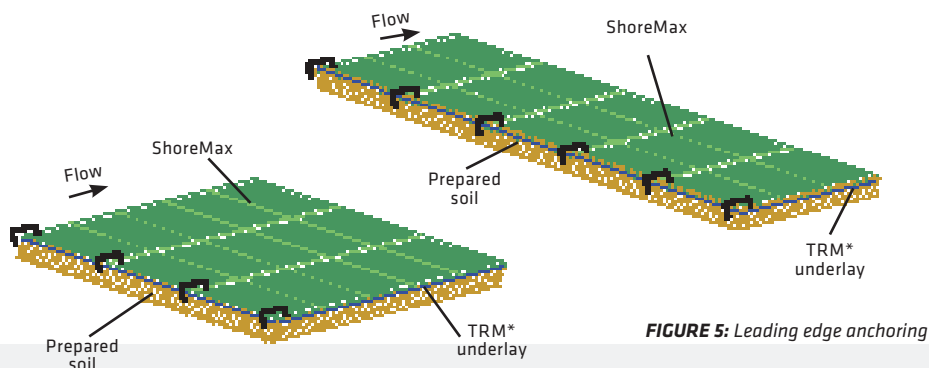


FIGURE 5: Leading edge anchoring

STEEP CHANNEL/CHUTE SPILLWAY DETAIL

*ShoreMax® Mats can be installed over a variety of underlayments including: sod, TRMs, geotextiles, and in some cases Erosion Control Blankets (ECBs).

1. Prepare soil before installing erosion control products, including any necessary application of lime, fertilizer and seed (when installing TRM or ECB underlayment).
2. Install TRM over prepared soils according to manufacturer's recommendations.
3. Place the ShoreMax Mat in the bottom of the channel over the installed TRM (Figure 3). The ShoreMax Mat should be installed up to the appropriate elevation on the side slope as determined by the engineer. The ShoreMax Mat can be laid in either direction.
4. For channels carrying continuous water flows, an appropriate geotextile should be placed under the ShoreMax Mat for submerged applications (Figure 4).
5. Place staples/anchors in the appropriate pattern. Perimeter staples can be shared between two adjacent panels. In soft or highly erodible soils, percussion earth anchors may be required. Please see page 3 for additional details on anchoring.
6. At the beginning of channels and other areas where significant concentrated flows are directed onto the ShoreMax Mat, place one staple/pin per linear foot along the leading edge of the ShoreMax Mat, resulting in one staple/pin on each corner and gridline (Figure 5).



OUTLET/CULVERT PROTECTION DETAIL

* ShoreMax® Mats can be installed over a variety of underlayments including: sod, TRMs, geotextiles, and in some cases ECBs.

1. Prepare soil before installing erosion control products, including any necessary application of lime, fertilizer, and seed (when installing with a TRM or ECB).
2. Install TRM over prepared soils according to manufacturer's recommendations.
3. Place the ShoreMax Mat over the installed TRM (Figure 6). The ShoreMax Mat can be laid in either direction.
4. For culvert and outfall applications, the ShoreMax Transition Mat should extend a minimum width of 3-4 times the pipe diameter and a minimum length of 4-5 times the pipe diameter (Figure 6). With steeper channel gradients, the length of the ShoreMax Mat may need to be extended.
5. Place staples/anchors in the appropriate pattern. Perimeter staples can be shared between two adjacent panels. In soft or highly erodible soils, percussion earth anchors may be required. Please see page 3 for additional details on anchoring.
6. Place one staple/pin per linear foot along the leading edge of the ShoreMax Mat, resulting in one staple/pin on each corner and gridline (Figure 5).

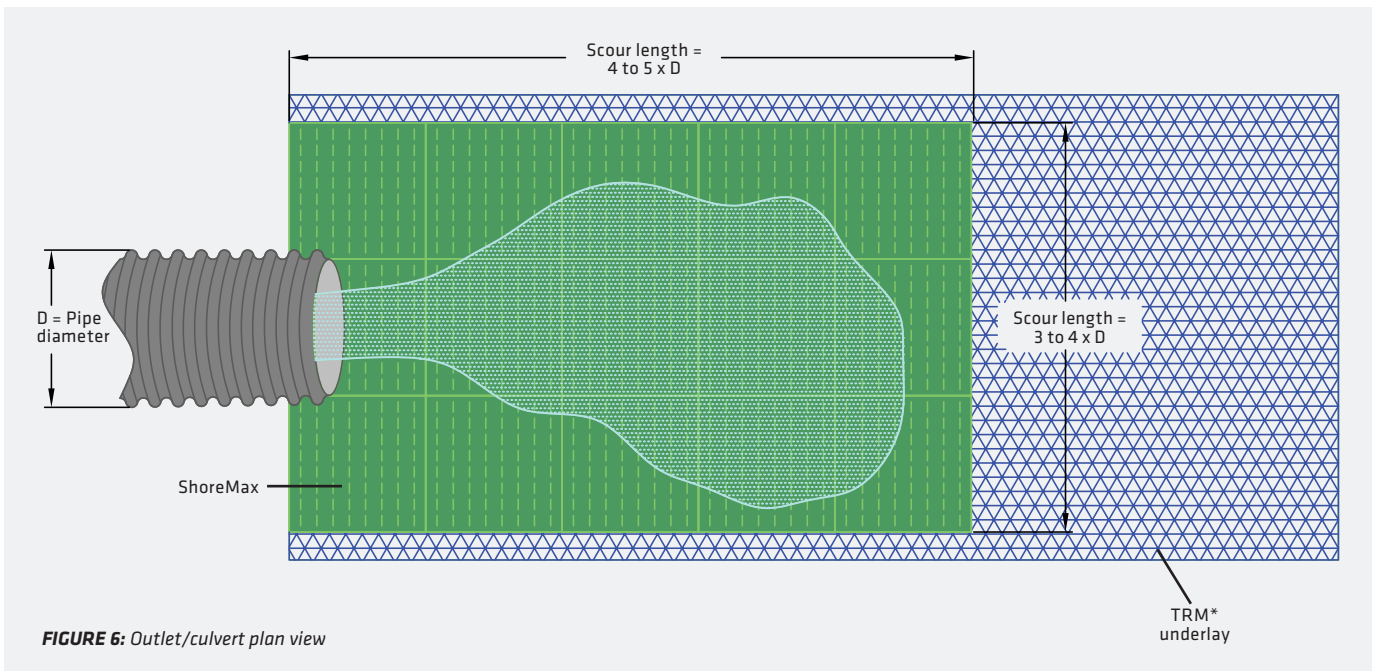


FIGURE 6: Outlet/culvert plan view

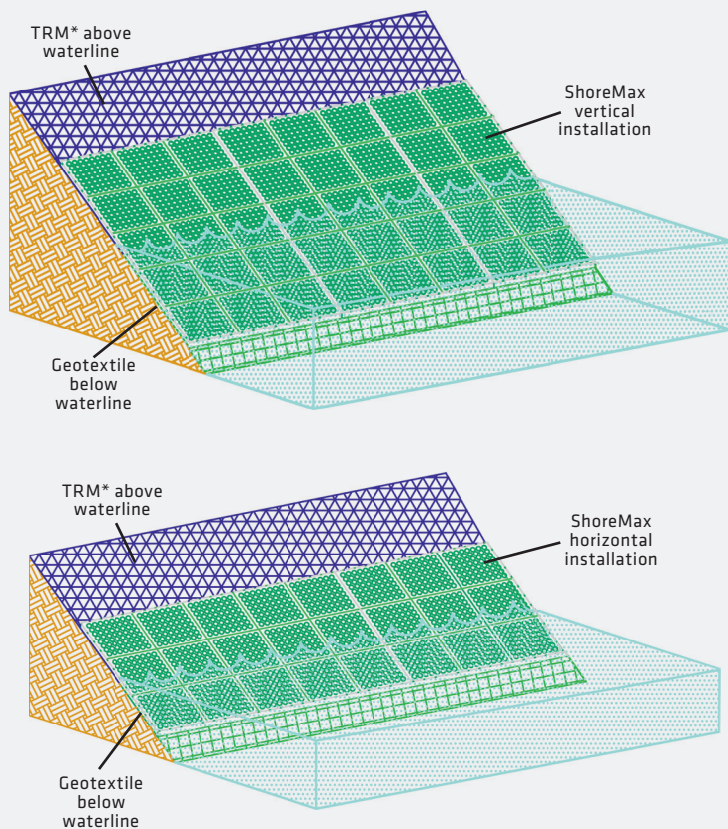


FIGURE 7: Shoreline/streambank plan view
**ShoreMax Mats can be placed on slope in either direction.*

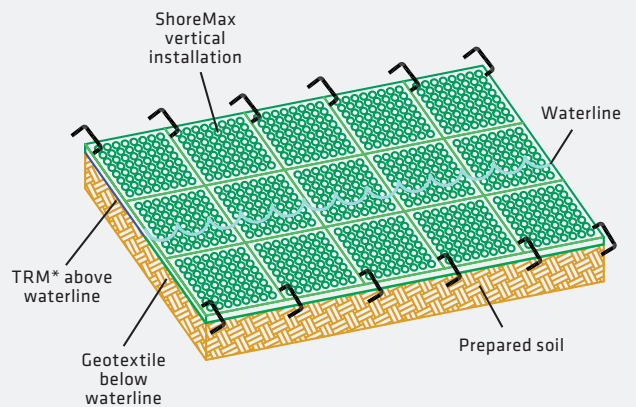
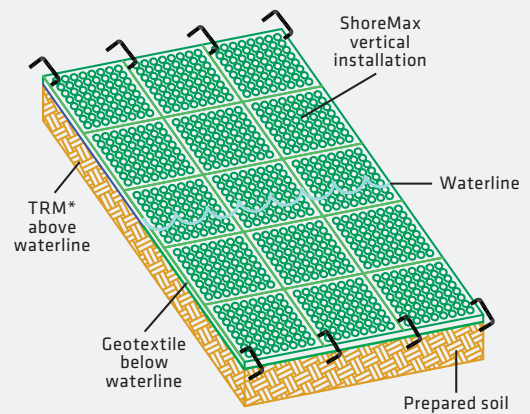


FIGURE 8: Edge of mat anchoring

SHORELINE/STREAMBANK/LEVEE DETAIL

** ShoreMax® Mats can be installed over a variety of underlayments including: sod, TRMs, geotextiles, and in some cases ECBs.*

1. Prepare soil before installing erosion control products, including any necessary application of lime, fertilizer and seed (when installing TRMs or ECBs underlayment).
2. Install TRM above the waterline following manufacturer's recommendations.
3. In areas below the normal water elevation, an appropriate geotextile should be installed beneath the ShoreMax Mat.
4. Place the ShoreMax Mat over the installed TRM or geotextile (Figure 7). The ShoreMax Mat can be laid in either direction (Figures 7 and 8).

5. Extend the ShoreMax Mat to cover the transitional range where scour is predicted based on typical water level fluctuations and wave lap.
6. Place staples/anchors in the appropriate pattern. Perimeter staples can be shared between two adjacent panels. In soft or highly erodible soils, percussion earth anchors may be required. Please see page 3 for additional details on anchoring.
7. Place one staple/pin per linear foot along the top and bottom edges of the ShoreMax System, placing one on each corner and gridline (Figure 8).

NOTE: A bottom anchor trench is not required when using ShoreMax Mat in conjunction with a TRM or geotextile.



EXPERIENCE YOU CAN RELY ON

North American Green is the industry leader in providing comprehensive erosion and sediment control and turf reinforcement solutions. Our integrated systems and products were developed to ensure absolute customer satisfaction. Our products are backed by the most thorough quality assurance practices in the industry. And, we provide comprehensive design assistance for all of our systems.

For more information about North American Green Erosion Control Systems, visit www.nagreen.com, e-mail info@nagreen.com or call **800-772-2040**. We are happy to assist you in developing solutions for all of your erosion and sediment control and turf reinforcement projects.



ShoreMax® Transition Mat facilitates vegetation growth through voids in the mat.




The RevetMax™ System ShoreMax Transition Mat is a smart option to replace rock in high scour areas such as pipe outlets.



North American Green
5401 St. Wendel-Cynthiana Road
Poseyville, Indiana 47633

nagreen.com
800-772-2040

Distributed by:



©2017, North American Green is a registered trademark. Certain products and/or applications described or illustrated herein are protected under one or more U.S. patents. Other U.S. patents are pending, and certain foreign patents and patent applications may also exist. Trademark rights also apply as indicated herein. Final determination of the suitability of any information or material for the use contemplated, and its manner of use, is the sole responsibility of the user. Printed in the U.S.A.



DISTRIBUTED BY:

ASP Enterprises, Quick Supply Co., Bowman Construction Supply & Cascade Geosynthetics are sister companies that serve customers from the Midwest, across the Rocky Mountains to the Pacific Northwest. Together we supply customers with a variety of environmental construction materials including erosion and sediment control, geosynthetics, stormwater management, drainage products, hardscapes and outdoor living, revegetation and soil amendments, waterproofing solutions and more.



We are full line distributors of environmental construction materials for all project types. Contact us for assistance with a project or a quote on products. From specification recommendations and project development to installation and completion, we're here to help with all of your site solution needs. Our warehouses are stocked with readily available inventory and we offer same and next-day deliveries.

ASP ENTERPRISES

aspent.com

salesasp@aspent.com

ST. LOUIS

1099 Cassens Industrial Ct.
St. Louis, MO 63026
636-343-4357

KANSAS CITY

5301 E 59th St.
Kansas City, MO 64130
816-554-1191

OMAHA

15263 Cooper St.
Omaha, NE 68138
402-861-8579

WICHITA

316-393-1554

WENTZVILLE

1906 E Service Rd. HWY 61 N
Wentzville, MO 63385
636-445-9090

QUICK SUPPLY CO.

quicksupplyco.com

salesquick@quicksupplyco.com

DES MOINES

6620 NW Toni Dr.
Des Moines, IA 50313
515-289-1271

BOWMAN CONSTRUCTION SUPPLY

bowmanconstructionsupply.com

salesbcs@bowmanconstructionsupply.com

DENVER

10801 E. 54th Ave.
Denver, CO 80239
303-696-8960

COLORADO SPRINGS

2445 Wayside Ct.
Colorado Springs, CO 80915
719-257-7840

LOVELAND

4495 Woods Ave.
Loveland, CO 80538
970-535-0863

CASCADE GEOSYNTHETICS

cascadageos.com

salescascade@cascadageos.com

PORTLAND

3610 N. Suttle Rd. Bldg B
Portland, OR 97217
971-339-1020

SALT LAKE CITY

425 N. Neil Armstrong Rd.
Salt Lake City, UT 84116
435-276-0820

**GEOSYNTHETICS | EROSION CONTROL | STORMWATER MANAGEMENT
REVEGETATION & SOIL AMENDMENTS | SEDIMENT CONTROL | HARDSCAPES**