


ShearForce12 Hybrid-Turf Instant Armor Scour Mat Installation Guide for Shorelines

(Not To Scale)

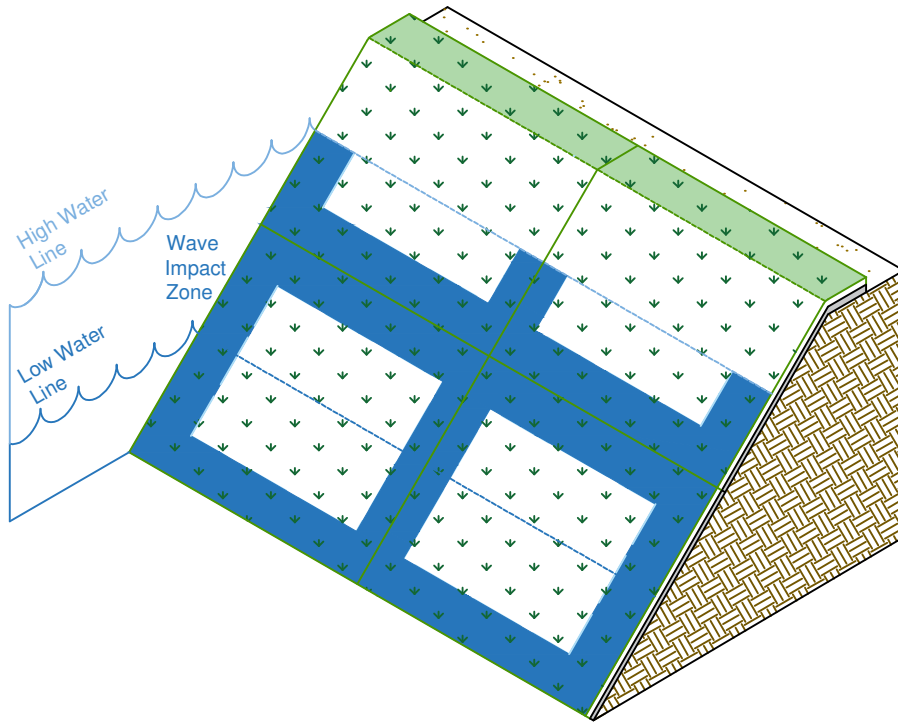

ShearForce12 Recommended Anchors		
Soil Type	*Minimum Anchor	Alternate Anchors
Cohesive, well compacted or undisturbed	12"x2"x12", 3/8" Rebar U-staple	12" Plastic Stake
Cohesive, loose	18"x2"x18", 3/8" Rebar U-staple	18" Percussion Earth Anchor
Non-Cohesive, well compacted or undisturbed	18"x2"x18", 3/8" Rebar U-staple	24" Percussion Earth Anchor
Non-Cohesive, loose	24"x2"x24", 3/8" Rebar U-staple	36" Percussion Earth Anchor




*U-shaped anchors are recommended as they can be shared between adjacent mats when seaming, reducing total anchors needed during installation.

Installation Guidelines

1. **Select appropriate anchors for matting based on soil type and consistency (See Recommended Anchors table).**
2. **Prepare seedbed**, create a smooth soil surface and eliminate any existing rills, soil clods, sticks or rocks larger than 1-inch in diameter.
3. **Apply seed and fertilizer**, and other amendments at the specified rates, either by broadcasting, drilling or hydro-seeding.
4. **Position and anchor leading edges of mats at the top of, or over the shoulder of shoreline slope (Figure 1)** and secure with a single row of anchors spaced 1-foot apart. (Fig 1)
5. **Seam adjacent mats (Figure 2)**, by butting edges together and anchor on 1.5-foot centers along 3-foot mat edges or 2.0-foot centers along 4-foot mat edges.
6. **Secure mat body (Figure 3)** with anchors installed according to Fig 3. Use additional anchors as necessary to ensure that fabric on bottom of mat is in intimate contact with underlying soil surface.
7. **Secure mat seams directly in the wave impact zone** with a single row of anchors spaced 1-foot apart. (Fig 1)
8. **Secure mat edges at or below waterline** with a single row of anchors spaced 1-foot apart. (Fig 1)

Additional Tips for Fast & Effective Installation

- Install mat with simulated turf on top and fabric backing against soil surface.
- For best vegetative results, do not install on top of any additional erosion control blanket, TRM, or fabric.
- Continuous fabric contact with the underlying soil surface is very important for effective product performance. If there are areas where void areas are noticeable under the mat, additional anchors may be necessary to ensure good fabric-to-soil contact.
- In bends or reaches that are not straight, miter cut joints. **DO NOT OVERLAP MAT EDGES.**
- Use a heavy-duty utility knife or saw to cut material as necessary.
- When seaming cut ends or edges, **DO NOT OVERLAP**. Simply butt together cut ends or edges and seam together with a single row of anchors, spaced 1.5-feet to 2.0-feet apart.

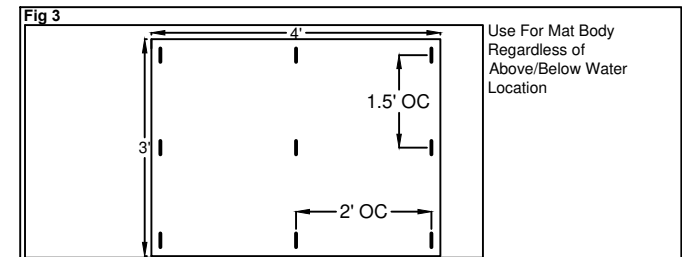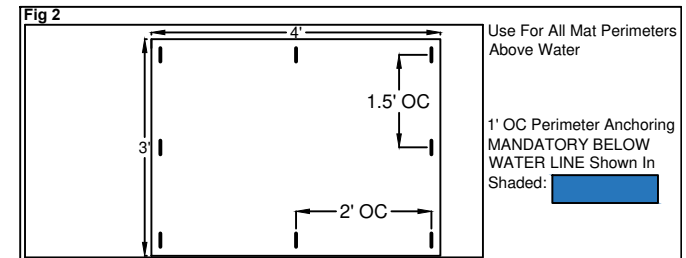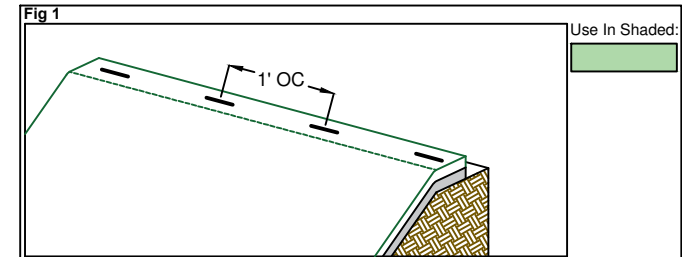



DISTRIBUTED BY:

ASP Enterprises, Quick Supply Co., Bowman Construction Supply & Cascade Geosynthetics are sister companies that serve customers from the Midwest, across the Rocky Mountains to the Pacific Northwest. Together we supply customers with a variety of environmental construction materials including erosion and sediment control, geosynthetics, stormwater management, drainage products, hardscapes and outdoor living, revegetation and soil amendments, waterproofing solutions and more.



We are full line distributors of environmental construction materials for all project types. Contact us for assistance with a project or a quote on products. From specification recommendations and project development to installation and completion, we're here to help with all of your site solution needs. Our warehouses are stocked with readily available inventory and we offer same and next-day deliveries.

ASP ENTERPRISES

aspent.com

salesasp@aspent.com

ST. LOUIS

1099 Cassens Industrial Ct.
St. Louis, MO 63026
636-343-4357

KANSAS CITY

5301 E 59th St.
Kansas City, MO 64130
816-554-1191

OMAHA

15263 Cooper St.
Omaha, NE 68138
402-861-8579

WICHITA

316-393-1554

WENTZVILLE

1906 E Service Rd. HWY 61 N
Wentzville, MO 63385
636-445-9090

QUICK SUPPLY CO.

quicksupplyco.com

salesquick@quicksupplyco.com

DES MOINES

6620 NW Toni Dr.
Des Moines, IA 50313
515-289-1271

BOWMAN CONSTRUCTION SUPPLY

bowmanconstructionsupply.com

salesbcs@bowmanconstructionsupply.com

DENVER

10801 E. 54th Ave.
Denver, CO 80239
303-696-8960

COLORADO SPRINGS

2445 Wayside Ct.
Colorado Springs, CO 80915
719-257-7840

LOVELAND

4495 Woods Ave.
Loveland, CO 80538
970-535-0863

CASCADE GEOSYNTHETICS

cascadageos.com

salescascade@cascadageos.com

PORTLAND

3610 N. Suttle Rd. Bldg B
Portland, OR 97217
971-339-1020

SALT LAKE CITY

425 N. Neil Armstrong Rd.
Salt Lake City, UT 84116
435-276-0820

**GEOSYNTHETICS | EROSION CONTROL | STORMWATER MANAGEMENT
REVEGETATION & SOIL AMENDMENTS | SEDIMENT CONTROL | HARDSCAPES**