


## Instructions

1. Prepare soil before installing rolled erosion control products (RECPs), including any necessary application of lime, fertilizer, and seed. Ground surface must be free of debris, rocks, clay clods and raked smooth sufficient to allow intimate contact of the RECP with the soil over the entirety of the installation.
2. Begin at the top of the slope by anchoring the RECPs in a 6" (15 cm) deep X 6" (15 cm) wide trench. Anchor the RECPs with a row of staples/stakes/pins spaced at  $S_T$  apart in the trench. Backfill and compact the trench after stapling and fold the roll over downslope. Secure RECPs over compacted soil with a row of staples/stakes/pins spaced at  $S_T$  apart across the width of the RECPs.
3. Roll the RECPs (A) down or (B) horizontally across the slope. When laying RECPs horizontal, a maximum of two roll widths or 16 feet, whichever is less, may be applied up the slope. If two roll widths or 16 ft is insufficient to cover the slope, material shall be placed vertically. RECPs will unroll with appropriate side against the soil surface. All RECPs must be securely fastened to soil surface by placing staples/stakes/pins in appropriate locations as shown in the staple pattern guide. RollMax RECPs and ECBs should utilize Staple Pattern C, TRMs and VMax materials should utilize Staple Pattern D.
4. The edges of parallel RECPs must be stapled with approximately 4" - 6" (10 - 15 cm) overlap.
5. Consecutive RECPs spliced down the slope must overlapped with the upstream mat atop the downstream mat (shingle style). The overlap should be 4" - 6" (10 - 15 cm).
6. At the terminal end, secure each mat across the width with a row of staples/stakes/pins spaced at  $S_T$ . If exposed to flow, foot traffic, wind uplift or other disruption, trench the terminal end in as shown in detail.
7. Fasteners should provide a minimum of twenty pounds of pullout resistance. Six-inch (10 cm) X one-inch (2.5 cm) eleven gauge staples are typically adequate. In loose soils, longer staples may be necessary, twist pins can provide the greatest pullout resistance. In hard or rocky soils, straight pins, such as HP-8 or HP-12, may be used where staples or twist pins are refused, provided the minimum pullout requirements are met. Bio-degradable fasteners shall not be used with TRM or HPTRM materials.


## Staple Pattern Guide

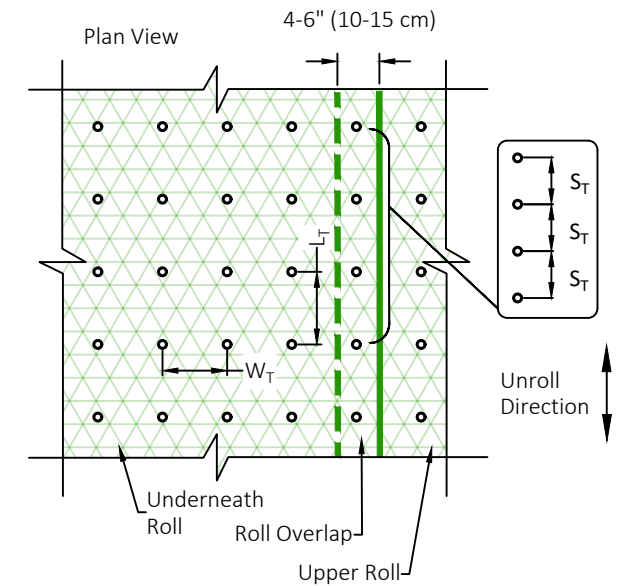

- Pin / Staple / Twist Pin, as appropriate for field conditions

Dimension	Staple Pattern	
	C	D
$W_T$	30" (75 cm)	22" (55 cm)
$L_T$	30" (75 cm)	22" (55 cm)
$S_T$	18" (45 cm)	18" (45 cm)
Nominal Frequency	1.7 / SY	3.0 / SY
Application	ECB (Degradable)	TRM (Permanent)
Required Fastener	Min. 20# pullout	Min. 20# pullout


\*Note: Staple Pattern A and B used prior to 8/2019 have been discontinued.

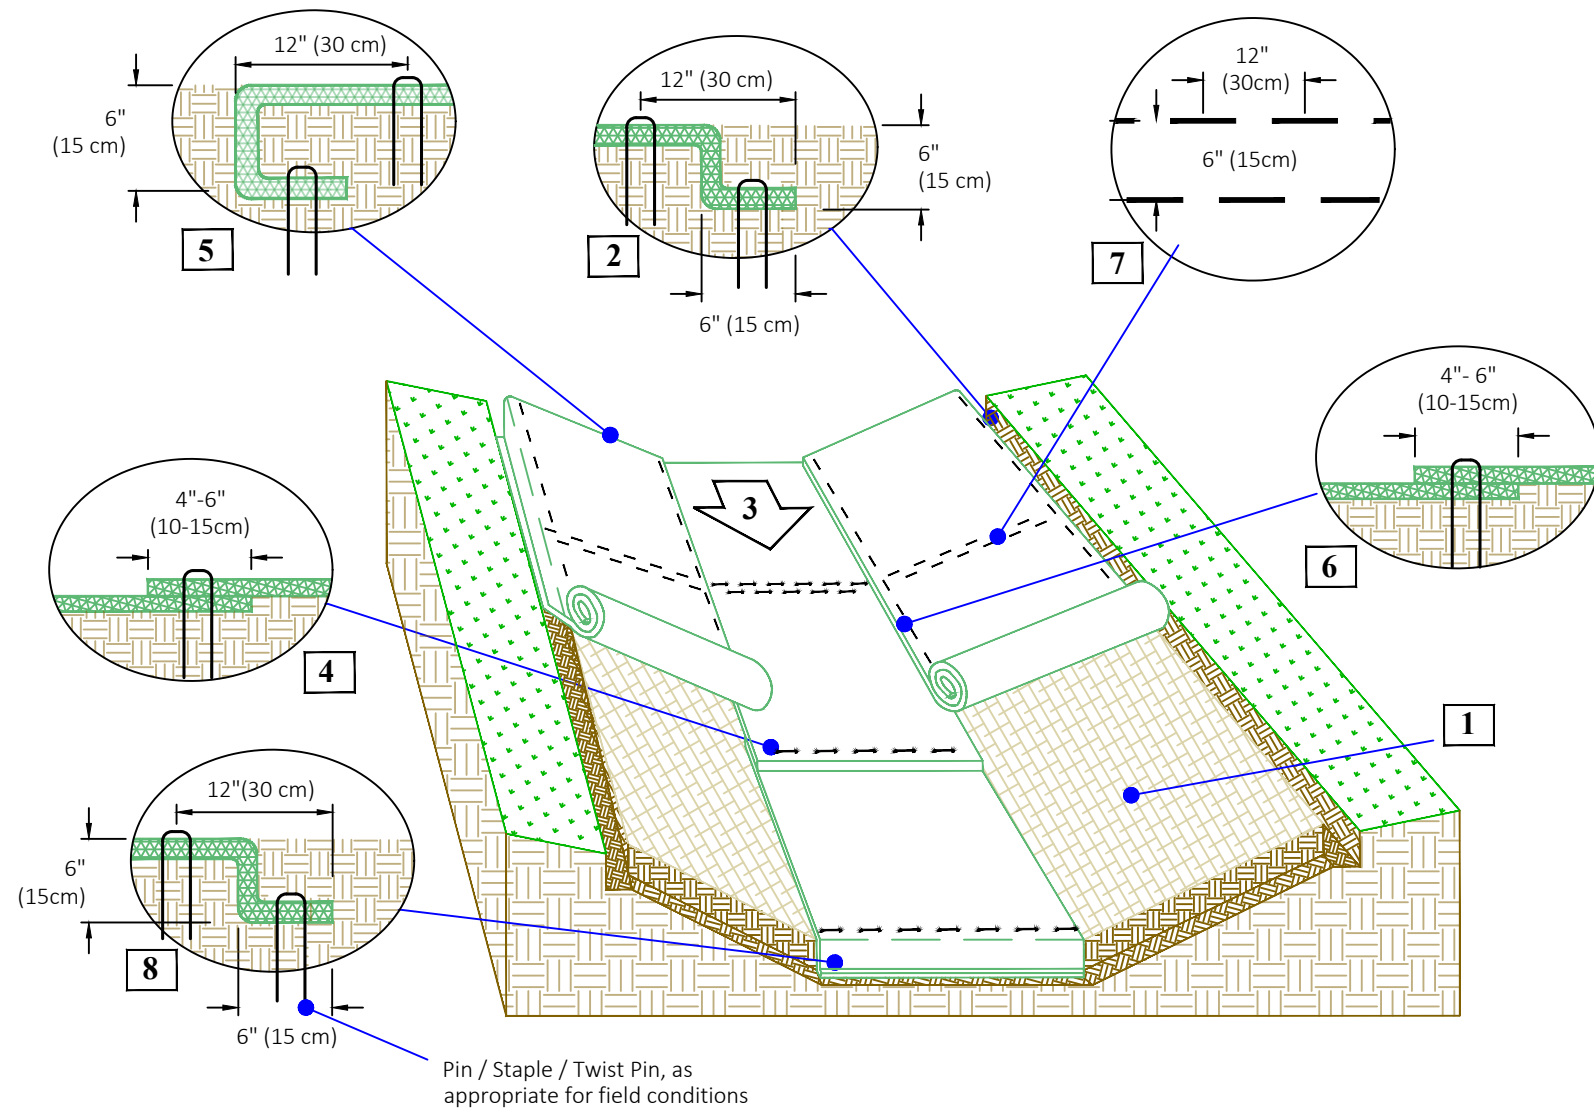

### Instructions

1. Prepare soil before installing rolled erosion control products (RECPs), including any necessary application of lime, fertilizer, and seed. Ground surface must be free of debris, rocks, clay clods and raked smooth sufficient to allow intimate contact of the RECP with the soil over the entirety of the installation.
2. Begin at the top of the channel by anchoring the RECPs in a 6" (15 cm) deep X 6" (15 cm) wide trench with approximately 12" (30 cm) of RECPs extended beyond the up-slope portion of the trench. Use ShoreMax mat at the channel/culvert outlet as supplemental scour protection as needed. Anchor the RECPs with a row of staples/stakes/pins approximately 12" (30 cm) apart in the bottom of the trench. Backfill and compact the trench after stapling. Apply seed to the compacted soil and fold the remaining 12" (30 cm) portion of RECPs back over the seed and compacted soil. Secure RECPs over compacted soil with a row of staples/stakes/pins spaced approximately 12" (30 cm) apart across the width of the RECPs.
3. Roll center RECPs in direction of water flow in bottom of channel. RECPs will unroll with appropriate side against the soil surface. All RECPs must be securely fastened to soil surface by placing staples/stakes/pins in appropriate locations as shown in the staple pattern guide.
4. Place consecutive RECPs end-over-end (Shingle style) with a 4" - 6" (10 - 15 cm) overlap. Use a double row of staples staggered 4" apart and 4" on center to secure RECPs.
5. Full length edge of RECPs at top of side slopes must be anchored with a row of staples/stakes/pins spaced at  $S_T$  apart in a 6" (15 cm) deep X 6" (15 cm) wide trench. Backfill and compact the trench after stapling.
6. Adjacent RECPs must be overlapped approximately 4" - 6" (10 - 15 cm) and secured with staples/stakes/pins at  $S_T$ .
7. In high flow channel applications a staple check slot is recommended at 30 to 40 foot (9 -12m) intervals. Use a double row of staples staggered 6" (15 cm) apart and 12" (30 cm) on center over entire width of the channel.
8. The terminal end of the RECPs must be anchored with a row of staples/stakes/pins spaced at  $S_T$  apart in a 6" (15 cm) deep X 6" (15 cm) wide trench. Backfill and compact the trench after stapling.
9. Fasteners should provide a minimum of twenty pounds of pullout resistance. Six-inch (10 cm) X one-inch (2.5 cm) eleven gauge staples are typically adequate. In loose soils, longer staples may be necessary, twist pins can provide the greatest pullout resistance. In hard or rocky soils, straight pins, such as HP-8 or HP-12, may be used where staples or twist pins are refused, provided the minimum pullout requirements are met. Bio-degradable fasteners shall not be used with VMax (TRM) or TMax (HPTRM) materials.

### Staple Pattern Guide

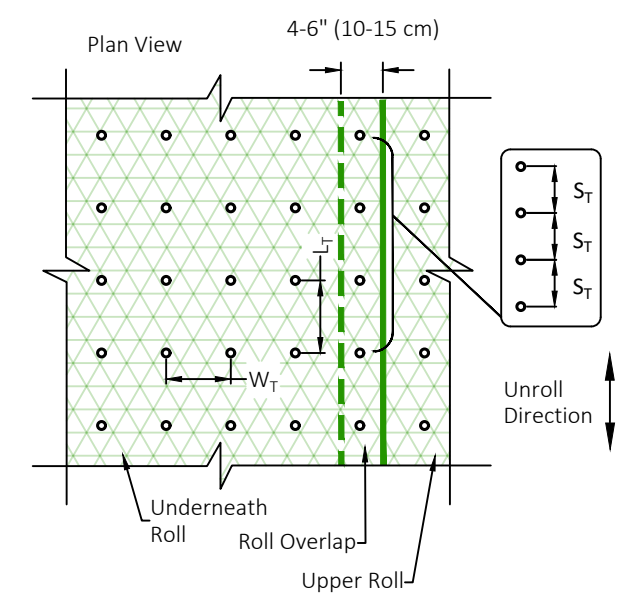

• Pin / Staple / Twist Pin, as appropriate for field conditions

	Staple Pattern
Dimension	E
$W_T$	20" (50 cm)
$L_T$	20" (50 cm)
$S_T$	18" (45 cm)
Nominal Frequency	3.8 / SY
Required Fastener	Min. 20# Pullout

**CRITICAL POINTS**  
 A. Overlaps and Seams  
 B. Projected Water Line  
 C. Channel Bottom/Side Slope Vertices



**NOTES:**  
 \*Horizontal staple spacing should be altered if necessary to allow staples to secure the critical points along the channel surface.




Project: Standard Channel Layout, Unroll w/Flow - RECP  
 Shown: Isometric View of Channel, Fastener Placement, Trenching and Overlap, Some Fasteners and Vegetation  
 Omitted for Clarity, NTS

Date: 4/4/2023  
 WG: 886-540-9810  
 www.westerngreen.com  
 www.westernexcelsior.com  
 www.nagreen.com

### Instructions

### Staple Pattern Guide

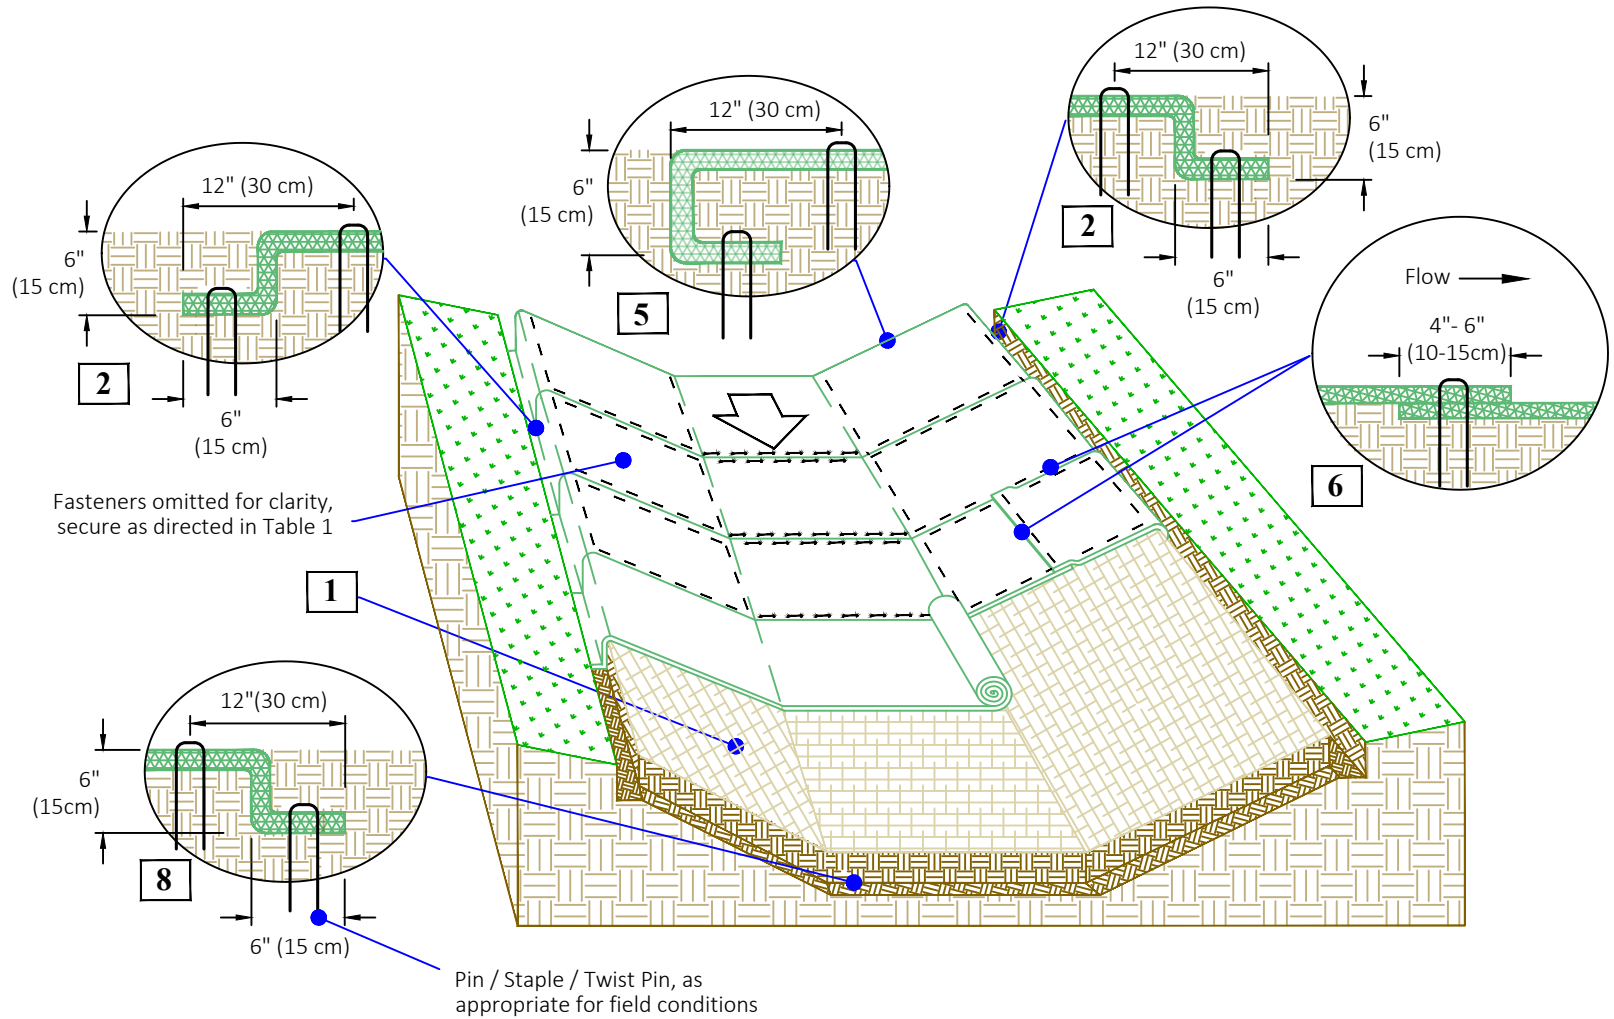

Fasteners omitted for clarity, secure as directed in Table 1

Pin / Staple / Twist Pin, as appropriate for field conditions

**CRITICAL POINTS**


- A. Overlaps and Seams
- B. Projected Water Line
- C. Channel Bottom/Side Slope Vertices



**NOTES:**

\*Horizontal staple spacing should be altered if necessary to allow staples to secure the critical points along the channel surface.

1. Prepare soil (fig. 1) before installing rolled erosion control products (RECPs), including any necessary application of lime, fertilizer, and seed. Ground surface must be free of debris, rocks, clay clods and raked smooth sufficient to allow intimate contact of the RECP with the soil over the entirety of the installation. Apply seed and amendments to the compacted soil.
2. Dig anchor trench, 6" (15 cm) deep X 6" (15 cm) wide, at the upstream most edge of installation across the channel. Begin at the top of the channel by unrolling the RECP across the channel, perpendicular to the direction of flow, cut to fit. Carefully flip the RECP panel upstream, leaving it upside down. Place the upside down leading edge in the trench. Anchor the RECP panel with a row of fasteners spaced at  $S_T$  apart in the bottom of the trench. Backfill and compact the trench after fastening. With the RECP secured in the backfilled trench, flip the RECP panel over, right side up, over the backfill. The end result should mimic fig. 2. Secure RECP just downstream of trench with a row of fasteners located approximately 12" (30 cm) downstream from the trench, spaced at  $S_T$ .
3. Roll subsequent RECP panels across the channel, fitting the downstream panel under the upstream panel. RECPs shall be unrolled with appropriate side against the soil surface. All RECPs must be securely fastened to soil surface by placing twist pins in appropriate locations as shown in the pin pattern guide.
4. Place consecutive RECPs end-over-end (Shingle style) with a 4"- 6" (10 - 15 cm) overlap, see fig.6. Secure overlaps as shown.
5. Adjacent RECPs must be overlapped approximately 4"- 6" (10 - 15 cm) and secured with fasteners at  $S_T$ .
6. The terminal end of the RECPs must be anchored with a row of fasteners spaced at  $S_T$  apart in a 6" (15 cm) deep X 6" (15 cm) wide trench (minimum). Backfill and compact the trench after stapling.
7. Fasteners should provide a minimum of twenty pounds of pullout resistance. Six-inch (10 cm) X one-inch (2.5 cm) eleven gauge staples are typically adequate. In loose soils, longer staples may be necessary, twist pins can provide the greatest pullout resistance. In hard or rocky soils, straight pins, such as HP-8 or HP-12, may be used where staples or twist pins are refused, provided the minimum pullout requirements are met. Bio-degradable fasteners shall not be used with VMax (TRM) or TMax (HPTRM) materials.

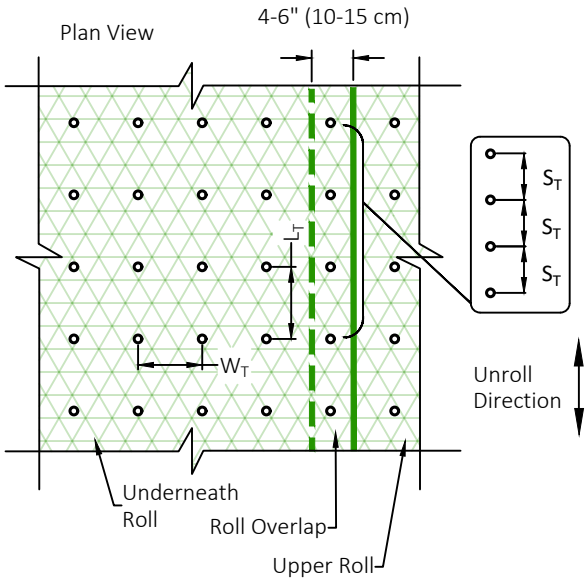

• Pin / Staple / Twist Pin, as appropriate for field conditions






	Staple Pattern
Dimension	E
$W_T$	20" (50 cm)
$L_T$	20" (50 cm)
$S_T$	18" (45 cm)
Nominal Frequency	3.8 / SY
Required Fastener	Min. 20# Pullout



Project: Standard Channel Layout, Unroll Cross Flow - RECP

Shown: Isometric View of Channel, Fastener Placement, Trenching and Overlap, Some Fasteners and Vegetation  
Omitted for Clarity, NTS

Date: 4/4/2023  
WG: 886-540-9810  
www.westerngreen.com  
www.westernexcelsior.com  
www.nagreen.com

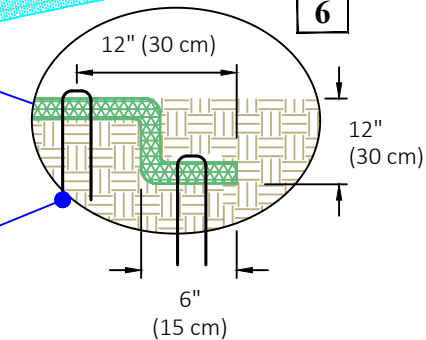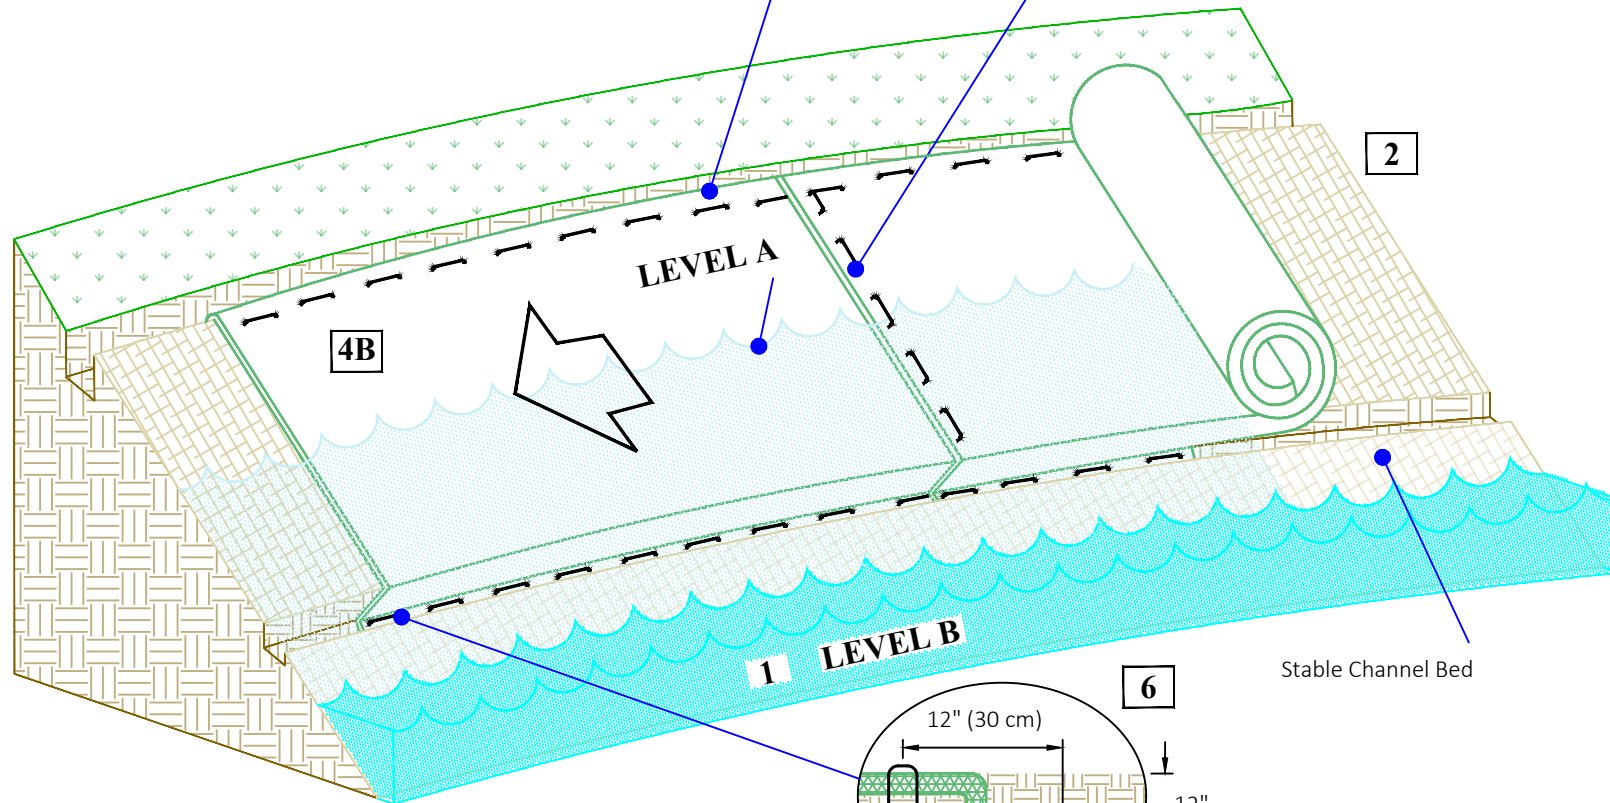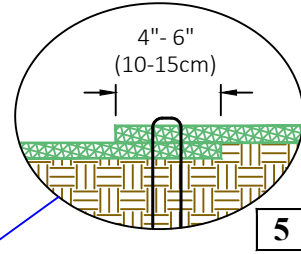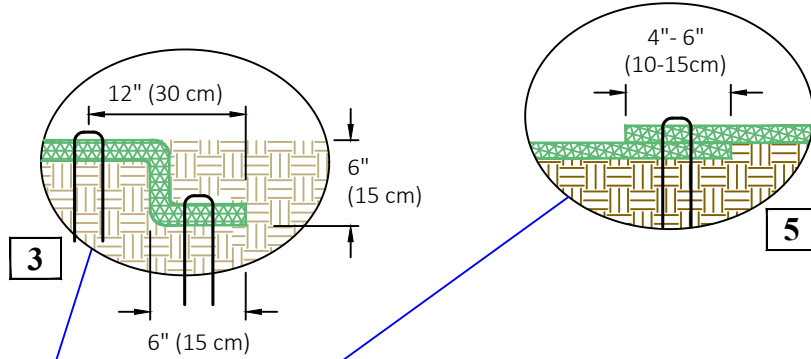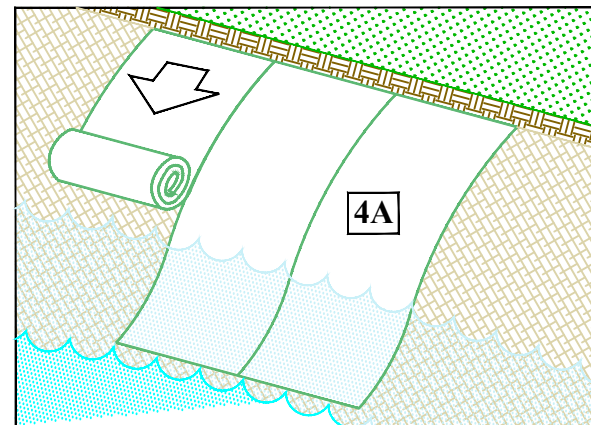


Pin / Staple / Twist Pin, as appropriate for field conditions

### Instructions

1. For easier installation, lower water level from Level A to Level B before installation.
2. Prepare soil before installing rolled erosion control products (RECPs), including any necessary application of lime, fertilizer, and seed. Ground surface must be free of debris, rocks, clay clods and raked smooth sufficient to allow intimate contact of the RECP with the soil over the entirety of the installation.
3. Begin at the top of the shoreline by anchoring the RECPs in a 6" (15 cm) deep X 6" (15 cm) wide trench. Anchor the RECPs with a row of staples/stakes/pins spaced at  $S_T$  apart in the bottom of the trench. Backfill and compact the trench after stapling.
4. Roll RECPs either (A) down the shoreline for long banks (top to bottom) or (B) horizontally across the shoreline slope. RECPs will unroll with appropriate side against the soil surface. VMax TRMs should always be installed parallel to flow. All RECPs must be securely fastened to soil surface by placing staples/stakes/pins in appropriate locations as shown in the staple pattern guide.
5. The edges of all horizontal and vertical seams must be stapled with approximately 4" - 6" (10 - 15 cm) overlap. Note: \*In streambank applications, seam overlaps should be shingled in the predominant flow direction.
6. The edges of the RECPs at or below normal water level must be anchored by placing the RECP's in a 12" (30 cm) deep X 6" (15 cm) wide anchor trench. Anchor the RECPs with a row of staples/stakes/pins spaced approximately 12" (30cm) apart in the trench. Backfill and compact the trench after stapling (stone or soil may be used as backfill). For installation at or below normal water level, use of ShoreMax mat on top of the RECP or geotextile underneath is likely required for sections below the normal water line.
7. Fasteners should provide a minimum of twenty pounds of pullout resistance. Six-inch (10 cm) X one-inch (2.5 cm) eleven gauge staples are typically adequate. In loose soils, longer staples may be necessary, twist pins can provide the greatest pullout resistance. In hard or rocky soils, straight pins, such as HP-8 or HP-12, may be used where staples or twist pins are refused, provided the minimum pullout requirements are met. Bio-degradable fasteners shall not be used with VMax (TRM) or TMax (HPTRM) materials.

### Staple Pattern Guide

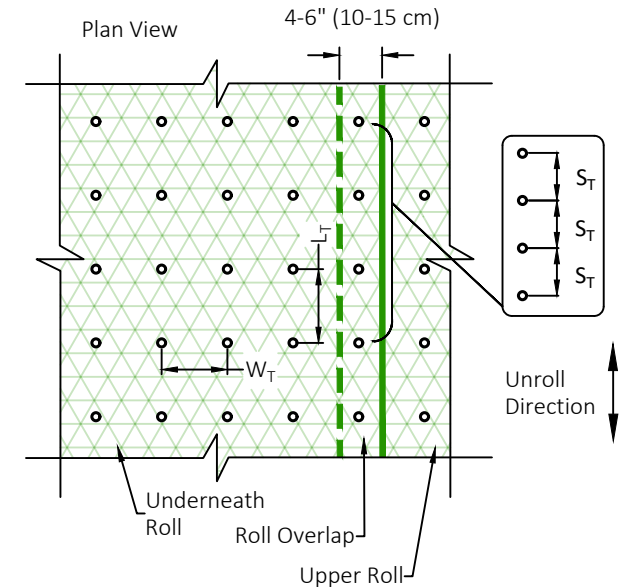

• Pin / Staple / Twist Pin, as appropriate for field conditions

Staple Pattern	
Dimension	E
$W_T$	20" (50 cm)
$L_T$	20" (50 cm)
$S_T$	18" (45 cm)
Nominal Frequency	3.8 / SY
Required Fastener	Min. 20# Pullout



Project: Standard Channel Bank Layout - RECP

Shown: Isometric View of Channel, Fastener Placement, Trenching and Overlap, Some Fasteners and Vegetation  
Omitted for Clarity, NTS

Date: 4/4/2023  
WG: 886-540-9810  
www.westerngreen.com  
www.westernexcelsior.com  
www.nagreen.com



## DISTRIBUTED BY:

ASP Enterprises, Quick Supply Co., Bowman Construction Supply & Cascade Geosynthetics are sister companies that serve customers from the Midwest, across the Rocky Mountains to the Pacific Northwest. Together we supply customers with a variety of environmental construction materials including erosion and sediment control, geosynthetics, stormwater management, drainage products, hardscapes and outdoor living, revegetation and soil amendments, waterproofing solutions and more.



We are full line distributors of environmental construction materials for all project types. Contact us for assistance with a project or a quote on products. From specification recommendations and project development to installation and completion, we're here to help with all of your site solution needs. Our warehouses are stocked with readily available inventory and we offer same and next-day deliveries.

### ASP ENTERPRISES

[aspent.com](http://aspent.com)

[salesasp@aspent.com](mailto:salesasp@aspent.com)

#### ST. LOUIS

1099 Cassens Industrial Ct.  
St. Louis, MO 63026  
636-343-4357

#### KANSAS CITY

5301 E 59th St.  
Kansas City, MO 64130  
816-554-1191

#### OMAHA

15263 Cooper St.  
Omaha, NE 68138  
402-861-8579

#### WICHITA

316-393-1554

#### WENTZVILLE

1906 E Service Rd. HWY 61 N  
Wentzville, MO 63385  
636-445-9090

### QUICK SUPPLY CO.

[quicksupplyco.com](http://quicksupplyco.com)

[salesquick@quicksupplyco.com](mailto:salesquick@quicksupplyco.com)

#### DES MOINES

6620 NW Toni Dr.  
Des Moines, IA 50313  
515-289-1271

### BOWMAN CONSTRUCTION SUPPLY

[bowmanconstructionsupply.com](http://bowmanconstructionsupply.com)

[salesbcs@bowmanconstructionsupply.com](mailto:salesbcs@bowmanconstructionsupply.com)

#### DENVER

10801 E. 54th Ave.  
Denver, CO 80239  
303-696-8960

#### COLORADO SPRINGS

2445 Wayside Ct.  
Colorado Springs, CO 80915  
719-257-7840

#### LOVELAND

4495 Woods Ave.  
Loveland, CO 80538  
970-535-0863

### CASCADE GEOSYNTHETICS

[cascadageos.com](http://cascadageos.com)

[salescascade@cascadageos.com](mailto:salescascade@cascadageos.com)

#### PORTLAND

3610 N. Suttle Rd. Bldg B  
Portland, OR 97217  
971-339-1020

#### SALT LAKE CITY

425 N. Neil Armstrong Rd.  
Salt Lake City, UT 84116  
435-276-0820

**GEOSYNTHETICS | EROSION CONTROL | STORMWATER MANAGEMENT  
REVEGETATION & SOIL AMENDMENTS | SEDIMENT CONTROL | HARDSCAPES**